

Position and Shim

Window should be installed level, square, plumb and straight so that performance or operation of the product is not compromised.

All adjustments to the position of the window in the rough opening should be made before any anchorage or sealing of the unit is completed.

Shims should be installed between the window frame and the rough opening from the interior face of the window to the exterior face of the window. Support of the full depth of the frame prevents distortion

