


# Shim & Anchor

## *Fixed Window*

Fasten as indicated

Fasteners should not be placed through jamb extensions to secure the window to the surrounding wall

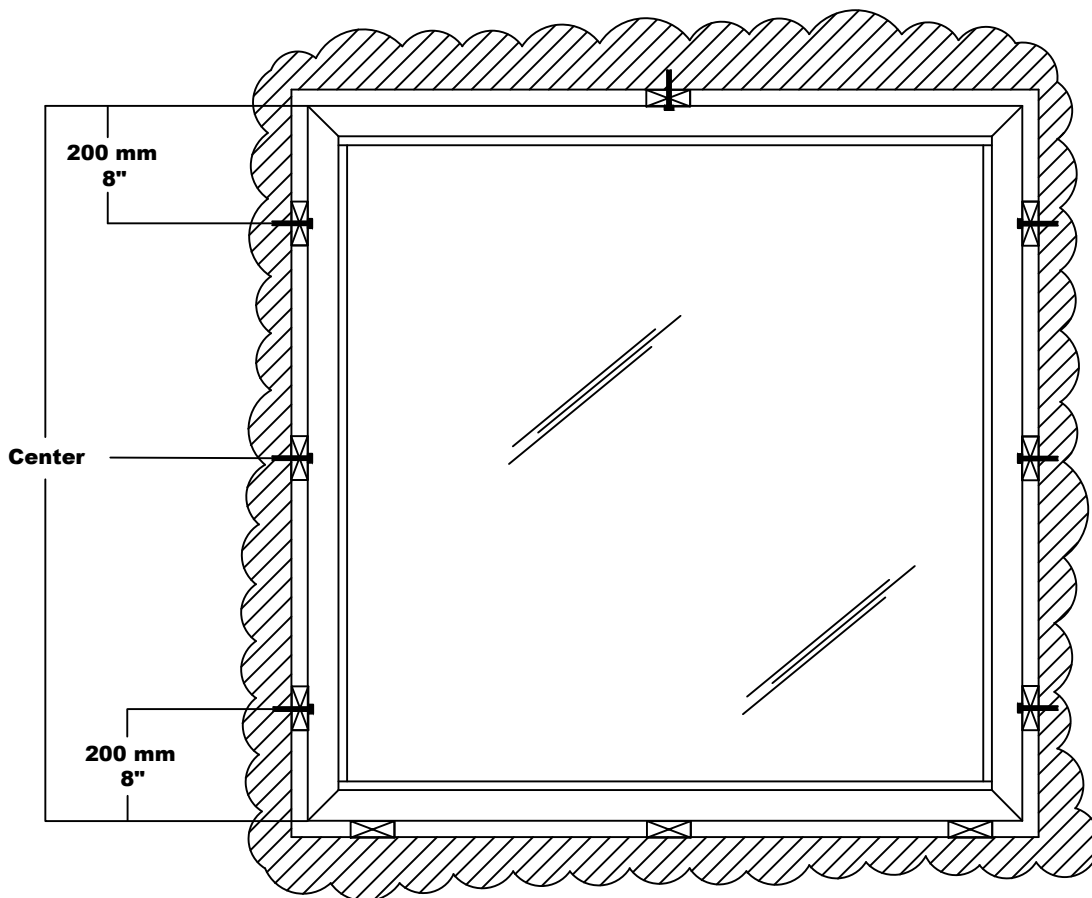

FASTENER LONG ENOUGH TO PENETRATE  
A MINIMUM OF 25MM (1") INTO THE ROUGH  
OPENING STUDS.

⊠ SHIM WITH ANCHOR

⊠ SHIM LOCATION